

Here is a guide for installing this board in your car. I know nothing about your abilities, so I am going to assume I need to tell you everything. Use only what you need and ignore the rest, with my apologies.

- 1) Remove the old unit from your car. If you haven't done this, my video will show you where it is located
- 2) Cut the wiring "pigtail" from the old unit like this:




- 3) Strip about ¼ inch of the insulation from the ends of each wire, except the orange. You will not use the orange.

4) Insert the striped wires into the board like this. Holding the board as in the photo, the wire colors are, from top to bottom: Black, Purple, Red, Blue, Green, No Wire, White, Yellow and Brown.




5) The wires are inserted in the board by loosening the screws in the blue terminal block as follows.

Loosen screws (Counter Clock Wise)

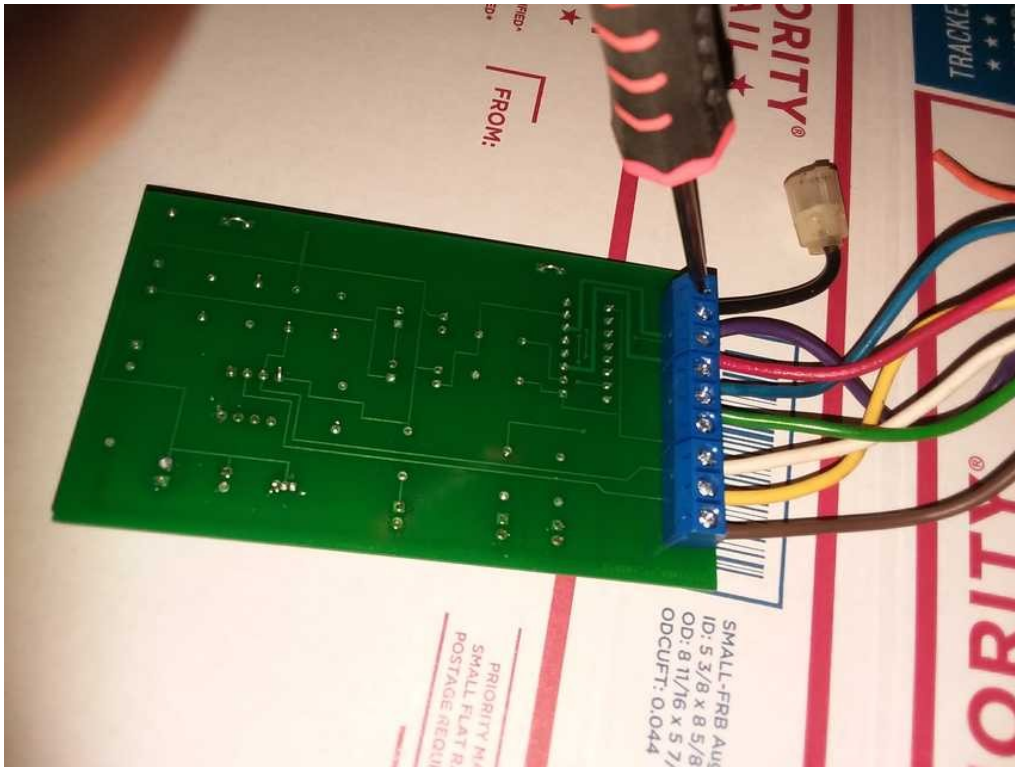

This will open the wire clamps

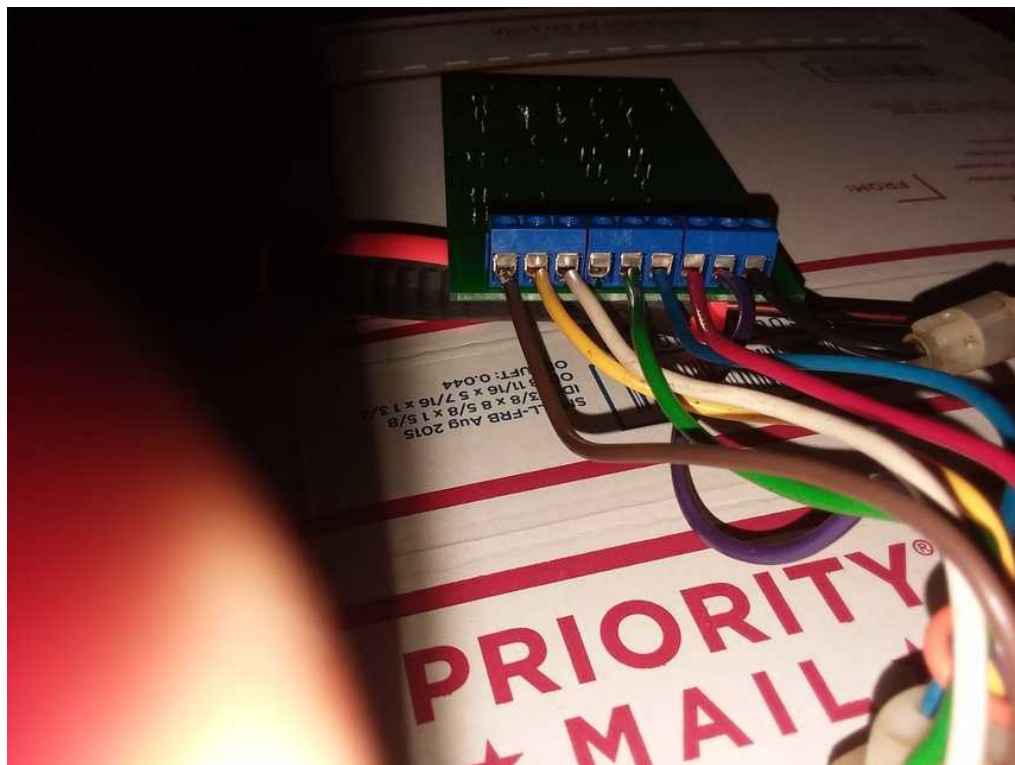

Insert your wires, and tighten the screws.

The front of the board will look like this:

Notice that the wire colors are marked on the RH edge. (N) Brown, (Y) Yellow, (W) White, (+5) Do not connect anything here, (G) Green, (U) Blue, (R) Red, (P) Purple and (B) Black.

